

Installation and Maintenance Manual

Forbes Marshall Cast Strainer

FMSTR54-T

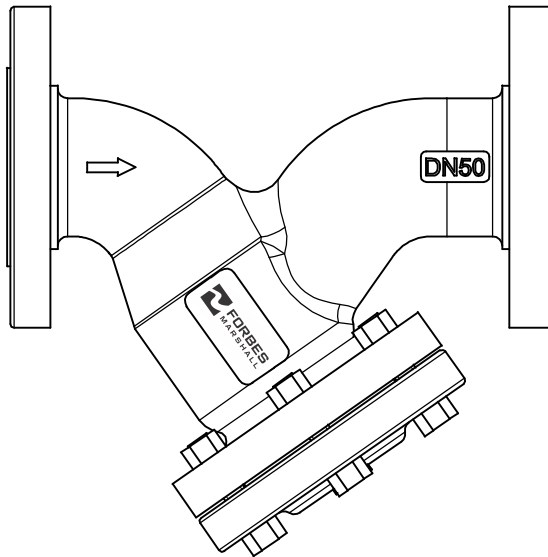


Table of Contents

1.	Preface	1
2.	Important Safety Notes	1
3.	Brief Product Information	3
4.	Product Working Principle	5
5.	Installation Guidelines	5
6.	Start-up and Commissioning	6
7.	Maintenance Guidelines	6
8.	Troubleshooting	7
9.	Available Spares	8
10.	Warranty Period	9

PLEASE NOTE - Throughout this manual this cautionary symbol is used to describe a potential damage or injury that might occur if the safety considerations are overlooked. This symbol denotes **CAUTION**, **WARNING** or **DANGER**.



1. Preface:

This manual is intended for anyone using, commissioning, servicing, or disposing the below mentioned products safely and efficiently.

Forbes Marshall Cast Strainer [FMSTR54-T]

Size: DN 50 (2"), DN 65 (2 ½"), DN 80 (3"), DN 100 (4"), DN 125 (5"), DN 150 (6"), DN 200 (8"), DN 250 (10"), DN 300 (12").

PLEASE NOTE:

Throughout this manual the following cautionary symbol is used to describe a potential damage or injury that might occur if the safety considerations are overlooked.

2. Important Safety Notes:



Read this section carefully before installing/operating/maintaining the product. The precautions listed in this manual are provided for personnel and equipment safety. Furthermore, Forbes Marshall accepts no responsibility for accidents or damage occurring as a result of failure to observe these precautions. Note that the product is designed to perform for non-contaminated fluids only. A contamination in the form of chemical, foreign particle etc. can lead to problem with product performance and life of the product.

If these products in compliance with the operating instructions are, properly installed, commissioned, maintained and installed by qualified personnel (refer Section 2.7) the safety operations of these products can be guaranteed. General instructions for proper use of tools and safety of equipments, pipeline and plant construction must also be complied with.

2.1 Intended use:

Check if the product is suitable for intended use/ application by referring to the installation and maintenance instructions, name plates and technical information sheets.

- i) The product is suitable for use as defined in the technical information sheet. In case the need arises to use the product on any other fluid please contact Forbes Marshall for assistance.
- ii) Check for the suitability in conformance to the limiting conditions specified in technical information sheet of the product.
- iii) The correct installation and direction of fluid flow has to be determined.
- iv) Forbes Marshall products are not intended to resist external stresses, hence necessary precautions to be taken to minimize the same.

2.2 Accessibility and Lighting:

Safe accessibility and working conditions are to be ensured prior to working on the product.

2.3 Hazardous environment and media:

The product has to be protected from hazardous environment and check to ensure that no hazardous liquids or gases pass through the product.

2.4 Depressurizing of systems and normalizing of temperature:

Ensure isolation and safety venting of any pressure to the atmospheric pressure. Even if the pressure gauge indicates zero, do not make an assumption that the system has been depressurized. To avoid danger of burns allow temperature to normalize after isolation.

2.5 Tools and consumables:

Ensure you have appropriate tools and / or consumables available before starting the work. Use of original Forbes Marshall replacement parts is recommended.

2.6 Protective clothing:

Consider for the requirement of any protective clothing for you/ or others in the vicinity for protection against hazards of temperature (high or low), chemicals, radiation, dangers to eyes and face, noise and falling objects.

2.7 Permits to work:

All work to be carried out under supervision of a competent person. Training should be imparted to operating personnel on correct usage of product as per Installation and Maintenance instruction. "Permit to work" to be complied with (wherever applicable), in case of absence of this system a responsible person should have complete information and knowledge on what work is going on and where required, arrange to have an assistant with his primary goal and responsibility being safety. "Warning Notices" should be posted wherever necessary

2.8 Handling:

There is a risk of injury if heavy products are handled manually. Analyze the risk and use appropriate handling method by taking into consideration the task, individual, the working environment and the load.

2.9 Freezing:

Provision should be made to protect systems which are not self-draining, against frost damage (in environment where they may be exposed to temperatures below freezing point) to be made.

2.10 Product Disposal:

It is necessary to dispose this product only in accordance with local regulations at the authorized, qualified collecting point specified for equipment's and its parts—Please refer the part details mentioned in the material table of this manual. Please follow all waste disposal guidelines (Management & Handling) as published by local governing authorities in India & abroad

2.11 Returning products:

Customers and Stockist are reminded that, when returning products to Forbes Marshall they must provide information on any hazards and the precautions to be taken due to contamination residues or mechanical damage which may present a health, safety or environmental risk.

This information must be provided in writing including Health and Safety data sheets relating to any substances identified as hazardous or potentially hazardous.

3. Brief Product Information:

3.1 Description:

The Forbes Marshall Cast Strainer, FMSTR54-T has a strainer cap / flange through bolts and nuts and is available in cast steel with screen having 0.8mm dia perforation as standard upto DN 125 size.

Sizes DN 150 and above are available with 20 mesh lined perforated screen as standard.

3.2 Size and Pipe connections:

DN 50, 65, 80, 100, 125, 150, 200, 250 and 300

Note : Also available with IBR certificate on request.

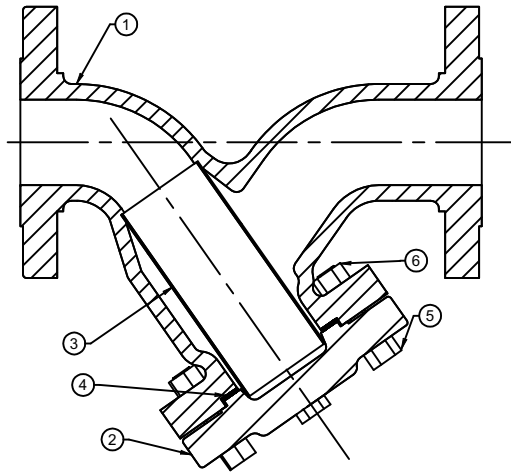


Figure 1 : Forbes Marshall Cast Strainer


Material

Sr. No.	Part	Material	Standard
1	Body	Cast Steel	ASTMA 216 Gr. WCB
2	Cap	Cast Steel	ASTMA 216 Gr. WCB
3	Screen	Stainless Steel	ASTMA 240 Gr. 304
4	Gasket	Spiral Wound gasket	SS304 + graphite
5	Bolt	Carbon Steel	ASTMA 193 Gr. B7
6	Nut	Carbon Steel	ASTMA 194 Gr 2H

3.3 Limiting Conditions:

Flange Type	Max Working Pressure (bar g)	Temperature (Deg C)
Class 150	13	220
Class 300	28.8	425
Class 600	57.5	425

3.4 Operating Range:

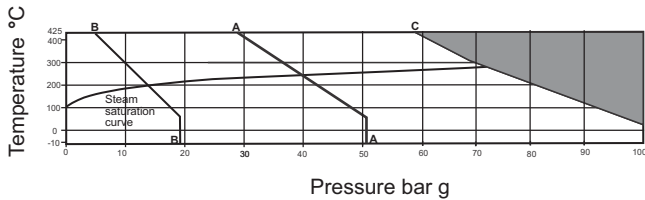

 This product **must not** be used in this region.

A-A Flanged ANSI 300

B-B Flanged ANSI 150

C-C Flanged ANSI 600

3.5 Product Dimension and Drawing:

Dimensions (approx.) in mm

DIM	A	B			C
SIZE		ANSI			
DN		150	300	600	
50	276	152.4	165.1	165.1	199
65	317	177.8	190.5	190.5	231
80	350	190.5	209.5	209.6	385
100	423	228.6	254	273.1	324
125	465	254	279.4	330.2	381
150	593	279.4	317.5	355.6	474
200	766	342.9	381	419.1	667
250	899	406.4	444.5	508	815
300	1048	482.6	520.7	558.8	968

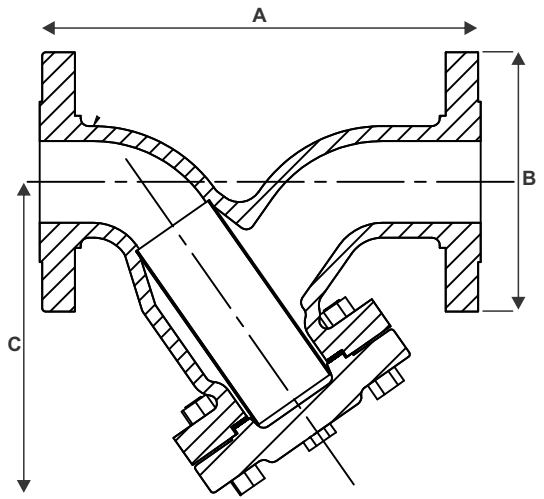


Figure 2 : Dimensional Drawing of FMSTR54-T

4. Product Working Principle:

Forbes Marshall Cast Strainer is used to remove dirt, debris and other foreign particles from the fluid, it restrict the particle size which are larger than specified sieve size (mesh or perforation). Pressure drop across the strainer will increase as dirt and debris will block the opening of the sieve. As pressure drop increases above certain specified limit the strainer sieve need to be cleaned.

5. Installation Guidelines : [Refer Figure 3 and 4]



 
Note: Before implementing any installations observe the 'Important Safety notes' in section 2. Referring to the Installation and Maintenance Instructions, name-plate and Technical Information Sheet, check that the product is suitable for the intended installation.

1. Check the direction marked on the strainer and the direction of fluid flow.
2. Remove protective covers from connections.
3. Strainer can be fitted on steam /gases and liquid systems in either horizontal pipework or vertical pipework when the flow and strainer pocket pointing downward. In a horizontal pipeline on steam / gas system the strainer pocket should be in the horizontal plane as this reduces the possibility of water hammer because of condense steam get accumulated in screen when strainer pocket pointed downward. On liquid systems the strainer pocket should point downwards.


4. Suitable isolation valves must be installed to allow for safe maintenance.

Note: Never install strainer in vertical pipework with flow from bottom to top it can lead to re-entrainment of filtered dirt or foreign particles back into the incoming flow.

5. Strainer can be lagged (insulated) if required.




Strainer installed on steam or gas line

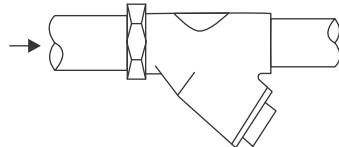


Strainer installed on liquid line

Figure 3 : Strainer installation on horizontal pipework

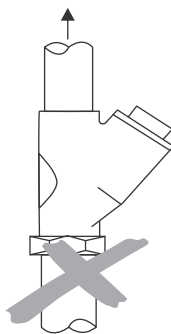

Flow upwards

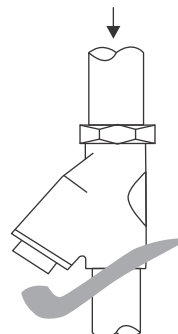

Flow downwards

Figure 4 : Strainer installation on vertical pipework

6. Start-up and Commissioning:

6.1. Flushing of lines:

As part of pre-installation all fluid handling equipment particularly piping should be thoroughly cleaned of scale and the internal debris which accumulates during construction. This is accomplished by blowing or flushing with air, steam, water & other suitable medium.

Follow this step to carry out flushing of lines.

Note: For a detailed procedure on flushing of lines please visit Forbes Marshall website.

6.2. Commissioning:

After installation or maintenance ensure that the system is fully functioning by confirming fluid is passing through it.

7. Maintenance Guidelines:



Note: Before undertaking any maintenance of the product it must be isolated from both supply line and return line and ensure pressure is normalized to atmosphere. The product should then be allowed to cool. When re-assembling ensure that all joint faces are clean.

Note: The strainer cap gasket contains a thin stainless steel support ring which may cause physical injury if not handled and disposed of carefully.

7.1. Routine and preventive maintenance:

Please refer to the maintenance schedule mentioned in the table below to undertake routine maintenance of the Forbes Marshall Cast Strainer.

Sr. No.	PARAMETERS TO BE CHECKED	FREQUENCY FOR CHECKING VARIOUS PARAMETERS					
		Daily	Weekly	Monthly	Quarterly	Half Yearly	Annually
1.	Clean of the screen					Y	

7.2. Recommended tightening torques:


Size	Part		Torque Range
DN 50	Nut (6)	19 A/F	170-185 Nm
DN 65		19 A/F	80-100 Nm
DN 80		24 A/F	55-65 Nm
DN 100		19 A/F	80-100 Nm
DN 125		19 A/F	80-100 Nm
DN 150		19 A/F	80-100 Nm
DN 200		30 A/F	80-100 Nm
DN 250		50 A/F	100-120 Nm
DN 300		55 A/F	100-120 Nm

Table 1: Recommended tightening torques for strainer [FMSTR54-T].

7.3. Procedure to clean or replace strainer screen: [Refer figure 1]

1. Unscrew nut (6) and remove the strainer cap (2).
2. Remove the muck and clean screen (3) thoroughly, fit screen carefully and fit cap (2) with new gasket (4).
3. Apply a thin coating of jointing paste.
4. Tighten nut (6) uniformly open up isolation valve. Check for gasket (4) leak if any then tighten the nut (6) of strainer cap (2) if required.

8. Troubleshooting:

If the expected performance is unachievable after installation of the Strainer, check the following points for appropriate corrective measures.

Failure Mode	Possible Cause	Remedy
No flow through strainer.	Strainer screen is clogged with rust or debris.	Flush inline drip leg or pipeline and clean the screen. If screen is rusted, replace with new screen.
Increased pressure drop across the strainer	Screen is blocking up.	Clean or replace the screen.
Fluid leakage from strainer pocket.	Gasket deterioration or damage.	Replace with new gasket and tighten the nut of the Strainer cap to the recommended torque.

Note: Never attempt to modify the product. When replacing old part with new part, use the spare parts listed in section 9.

9. Available Spares: [Refer figure 5]

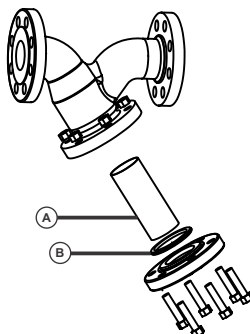


Figure 5 : Exploded view of Forbes Marshall Cast Strainer

Spares	Part No.	Spare Code
Screen & Gasket kit for DN 50 FMSTR54-T [Pack of 3]	A,B	050FMSTR54-TSKIT
Screen & Gasket kit for DN 65 FMSTR54-T [Pack of 3]	A,B	065FMSTR54-TSKIT
Screen & Gasket kit for DN 80 FMSTR54-T [Pack of 1]	A,B	080FMSTR54-TSKIT
Screen & Gasket kit for DN 100 FMSTR54-T [Pack of 1]	A,B	100FMSTR54-TSKIT
Screen & Gasket kit for DN 125 FMSTR54-T [Pack of 1]	A,B	125FMSTR54-TSKIT
Screen & Gasket kit for DN 150 FMSTR54-T [Pack of 1]	A,B	150FMSTR54-TSKIT
Screen & Gasket kit for DN 200 FMSTR54-T [Pack of 1]	A,B	200FMSTR54-TSKIT
Screen & Gasket kit for DN 250 FMSTR54-T [Pack of 1]	A,B	250FMSTR54-TSKIT
Screen & Gasket kit for DN 300 FMSTR54-T [Pack of 1]	A,B	300FMSTR54-TSKIT
Gasket kit for DN 50 FMSTR54-T[Pack 5]	B	050FMSTR54-TGKIT
Gasket kit for DN 65 FMSTR54-T[Pack 5]	B	065FMSTR54-TGKIT
Gasket kit for DN 80 FMSTR54-T[Pack 5]	B	080FMSTR54-TGKIT
Gasket kit for DN 100 FMSTR54-T[Pack 5]	B	100FMSTR54-TGKIT
Gasket kit for DN 125 FMSTR54-T[Pack 5]	B	125FMSTR54-TGKIT
Gasket kit for DN 150 FMSTR54-T[Pack 5]	B	150FMSTR54-TGKIT
Gasket kit for DN 200 FMSTR54-T[Pack 5]	B	200FMSTR54-TGKIT
Gasket kit for DN 250 FMSTR54-T[Pack 5]	B	250FMSTR54-TGKIT
Gasket kit for DN 300 FMSTR54-T[Pack 5]	B	300FMSTR54-TGKIT

How to Order:

Example: 1 No. DN 50 Forbes Marshall cast strainer, FMSTR54-T class150 IBR

How to Order Spares:

Always order spares by using the description given in the column headed "Available Spares" in user manual

10. Warranty Period:

As per ordering information and agreements in the contract.



www.forbesmarshall.com

Forbes Marshall Arca

Codel International

Krohne Marshall

Forbes Vyncke

Forbes Marshall Steam Systems

A: Forbes Marshall Pvt. Ltd.

Opp. 106th Milestone, CTS 2220,
Mumbai-Pune Road, Kasarwadi,
Pune MH 411034 INDIA

P: +91(0)20-68138555

F: +91(0)20-68138402

E: ccmidc@forbesmarshall.com

Forbes Marshall International Pte. Ltd.

16A, Tuas Avenue 1,
#05-21, JTC Space @Tuas
Singapore - 639533

P: +65 6219 3890

CIN No: U28996PN1985PTC037806