

Installation and Maintenance Manual

Forbes Marshall Liquid Drain Trap

FMLDT31

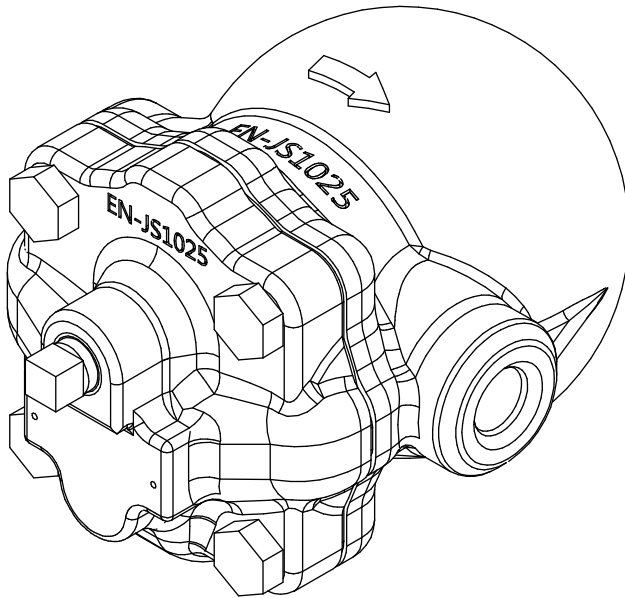


Table of Contents

1.	Preface	1
2.	Important Safety Notes	1
3.	Brief Product Information	3
4.	Product Working Principle	5
5.	Installation Guidelines	5
6.	Start-Up and Commissioning	6
7.	Maintenance Guidelines	6
8.	Troubleshooting	8
9.	Available Spares	9
10.	Warranty Period	9

PLEASE NOTE - Throughout this manual this cautionary symbol is used to describe a potential damage or injury that might occur if the safety considerations are overlooked. This symbol denotes **CAUTION**, **WARNING** or **DANGER**.



1. Preface:

This manual is intended for anyone using, commissioning, servicing, or disposing the below mentioned products safely and efficiently.

Forbes Marshall Liquid Drain Trap, FMLDT31.

Sizes: DN15 (1/2"), DN20 (3/4"), DN25 (1").

PLEASE NOTE:

Throughout this manual the following cautionary symbol is used to describe a potential damage or injury that might occur if the safety considerations are overlooked.

2. Important Safety Notes:



Read this section carefully before installing/operating/maintaining the product. The precautions listed in this manual are provided for personnel and equipment safety. Furthermore, Forbes Marshall accepts no responsibility for accidents or damage occurring as a result of failure to observe these precautions. Note that the product is designed to perform for non-contaminated fluids only. A contamination in the form of chemical, foreign particle etc. can lead to problem with product performance and life of the product.

If these products in compliance with the operating instructions are, properly installed, commissioned, maintained and installed by qualified personnel (refer Section 2.7) the safety operations of these products can be guaranteed. General instructions for proper use of tools and safety of equipments, pipeline and plant construction must also be complied with.

2.1. Intended use:

Check if the product is suitable for intended use/ application by referring to the installation and maintenance instructions, name plates and technical information sheets

- i) The product is suitable for use as defined in the technical information sheet. In case the need arises to use the product on any other fluid please contact Forbes Marshall for assistance.
- ii) Check for the suitability in conformance to the limiting conditions specified in technical information sheet of the product.
- iii) The correct installation and direction of fluid flow has to be determined.
- iv) Forbes Marshall products are not intended to resist external stresses, hence necessary precautions to be taken to minimize the same.

2.2. Accessibility and Lighting:

Safe accessibility and working conditions are to be ensured prior to working on the product.

2.3. Hazardous environment and media:

The product has to be protected from hazardous environment and check to ensure that no hazardous liquids or gases pass through the product.

2.4. Depressurizing of systems and normalizing of temperature:

Ensure isolation and safety venting of any pressure to the atmospheric pressure. Even if the pressure gauge indicates zero, do not make an assumption that the system has been depressurized.

To avoid danger of burns allow temperature to normalize after isolation.

2.5. Tools and consumables:

Ensure you have appropriate tools and / or consumables available before starting the work. Use of original Forbes Marshall replacement parts is recommended.

2.6. Protective clothing:

Consider for the requirement of any protective clothing for you/ or others in the vicinity for protection against hazards of temperature (high or low), chemicals, radiation, dangers to eyes and face, noise and falling objects

2.7. Permits to work:

All work to be carried out under supervision of a competent person. Training should be imparted to operating personnel on correct usage of product as per Installation and Maintenance instruction. "Permit to work" to be complied with (wherever applicable), in case of absence of this system a responsible person should have complete information and knowledge on what work is going on and where required, arrange to have an assistant with his primary goal and responsibility being safety. "Warning Notices" should be posted wherever necessary

2.8. Handling:

There is a risk of injury if heavy products are handled manually. Analyze the risk and use appropriate handling method by taking into consideration the task, individual, the working environment and the load.

2.9. Freezing:

Provision should be made to protect systems which are not self-draining, against frost damage (in environment where they may be exposed to temperatures below freezing point) to be made.

2.10 Product Disposal:

It is necessary to dispose this product only in accordance with local regulations at the authorized, qualified collecting point specified for equipment's and its parts—Please refer the part details mentioned in the material table of this manual.

Please follow all waste disposal guidelines (Management & Handling) as published by local governing authorities in India & abroad

2.11. Returning products:

Customers and Stockist are reminded that, when returning products to Forbes Marshall they must provide information on any hazards and the precautions to be taken due to contamination residues or mechanical damage which may present a health, safety or environmental risk.

This information must be provided in writing including Health and Safety data sheets relating to any substances identified as hazardous or potentially hazardous.

3. Brief Product Information:

3.1 Description:

The Forbes Marshall Liquid Drain Trap, FMLDT31, is an automatic liquid drain float trap for air systems. It has a cast iron body & cover with synthetic rubber valve head for +ve closure.

3.2 Available Sizes and End Connections

DN 15, 20 and 25, Screwed BSPT/NPT ends

3.3 Limiting Conditions:

PMA-Max. allowable pressure	:	13.0 barg
TMA-Max. allowable temperature	:	220°C
Cold hydraulic test pressure	:	19.5 barg
PMX-Max. differential pressure	:	13 barg
Min. operating temperature	:	0°C


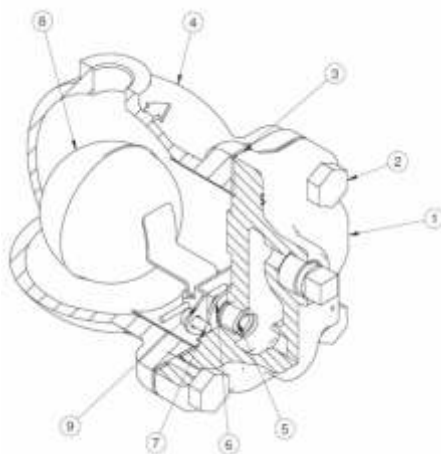


Figure 1 : Forbes Marshall Liquid Drain Trap

Material

No.	Part	Material	Standard
1	Base	Cast iron	IS 210 FG 260
2	Cover Bolts	Carbon steel	ASTM A193 Gr.B7
3	Cover Gasket	SS exfoliated graphite	
4	Cover	Cast iron	IS 210 FG 260
5	Valve Seat	Stainless steel	ASTM A 743 Gr.CA 40
6	Valve Seat Gasket	Stainless steel Type 410	ASTM A 410
7	Set Screws	Stainless steel Type 304	IS 1364
8	Ball Float & Lever	Stainless steel Type 304	ASTM A 240
9	Pivot Frame	Stainless Steel Type 304	ASTM A 240
10	Valve Head	Synthetic Rubber	Viton

3.4 Operating Range:

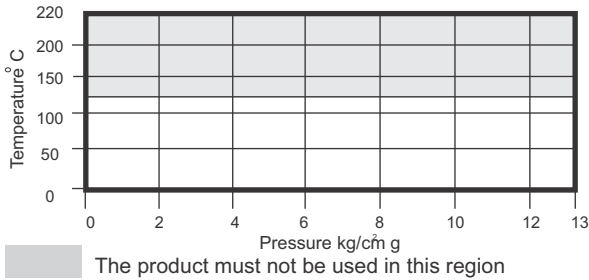

3.5 Product Dimension and Drawing:


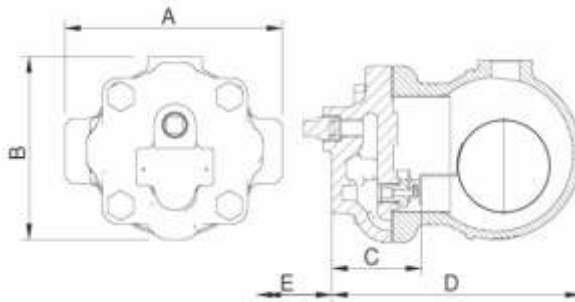


Figure 2 : Dimensional Drawing of FMLDT31

Dimensions (approx.) in mm

SIZE	A	B	C	D	E	WEIGHT (kg)
DN15/20	130	109	72	152	120	2.9
DN25	141	109	72	160	135	4

3.6 Capacity Chart:

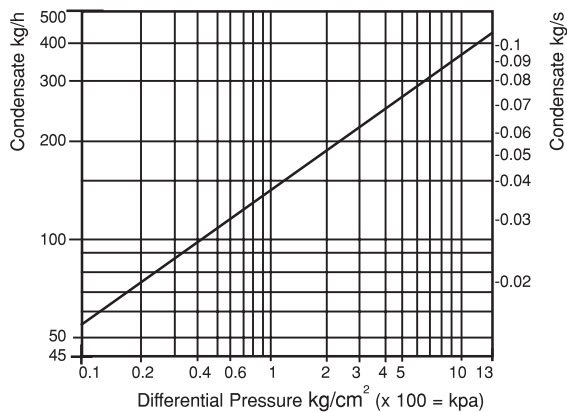

4. Product Working Principle:

(Refer to Figure 1) Forbes Marshall Liquid Drain Trap works on the Buoyancy Principle. as moisture enters the trap body and raises the float (8). The position of the ball float (8) depends upon the level/load of condensate (flow rate). The Liquid Drain trap continues to discharge condensate continuously and doesn't allow back up of moisture as long as the load is within the discharge capacity.

When the moisture load drops, the ball float (8) lowers in position and closes the outlet orifice (5) with the ball float (8) resting on the orifice of the valve seat (5).

(Refer to Fig. 4) A tapping is provided at the top of the trap to fit the balancing line. When there is high load, there are chances of the trap getting air locked. The balancing line is connected back to the upstream of the trap so that the air collected inside the trap is displaced back in the system.

5. Installation Guidelines: (Refer to figure 4)



Note: Before implementing any installations observe the 'Important Safety notes' in section 2. Referring to the Installation and Maintenance Instructions, name-plate and Technical Information Sheet, check that the product is suitable for the intended installation.

1. Install Forbes Marshall Liquid Drain Trap in horizontal direction.
2. Fit the trap close to the drain outlet and just below the drain equipment.
3. The arrow on the nameplate must point downwards.
4. The arrow on the casting indicates the flow direction.
5. If the trap is installed vertically, then the inlet should be on top.
6. The trapped air should be removed by connecting a balancing pipe of 3/8" tapping that is provided on the cover of the trap to the air receiver.
7. A strainer is always recommended before the Forbes Marshall Liquid Drain Trap.
8. Avoid any lift after the Liquid Drain Trap.

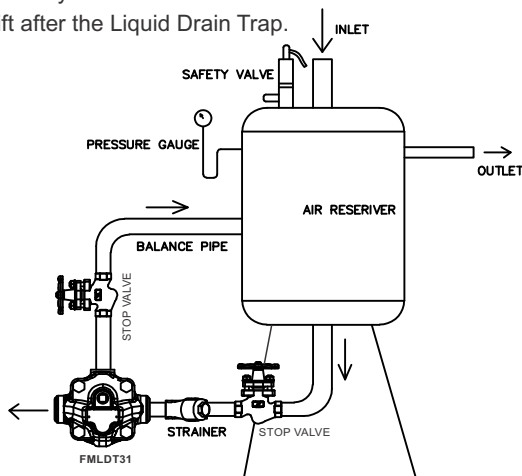


Figure 3: FMLDT31 installation with balance line arrangement

6. Start-up and Commissioning:

6.1. Flushing of lines:

As part of pre-installation all fluid handling equipment particularly piping should be thoroughly cleaned of scale and the internal debris which accumulates during construction. This is accomplished by blowing or flushing with air, steam, water and other suitable medium.

Note: For a detailed procedure on flushing of lines please visit Forbes Marshall website.

6.2. Commissioning:

After installation or maintenance ensure the system is in working condition.

1. After flushing of lines is complete, open the stop valve of balancing pipe and upstream of the trap respectively
2. Check for leaks and attend if any.

7. Maintenance Guidelines:



Before undertaking any maintenance on the product it must be isolated from both supply line and return line and any pressure should be allowed to safely normalize to atmosphere. The trap should then be allowed to cool. With suitable isolation repairs can be carried out with the trap in the line.

7.1. Routine and Preventive Maintenance:

Please refer to the maintenance schedule mentioned in the table below to undertake routine maintenance of the Forbes Marshall Liquid Drain Trap.

No.	Parameters to be checked	Frequency for checking and maintaining						
	Forbes Marshall Liquid Drain Trap	Immediately	Daily	Weekly	Monthly	Quarterly	Half yearly	Annually
1	Test Liquid Drain Trap			Y				
2	Repair / Replace FMLDT31 when testing shows leaks	Y						
3	Clean strainers of FMLDT31				Y			
4	Clean internals of FMLDT31					Y		
5	Visual inspection for leakages		Y					
6	Arresting any other leaks	Y						

7.2. Tool Kit:

To carry out any maintenance on the trap please use the tools mentioned below:

Components	Tool	Tool Size
Valve seat (4.1mm ID)	Box Spanner	17 mm (A/F)
M4 screw (valve seat) (4No)	Screw Driver	(12 inch)
M10 Bolt for outside covering	Box Spanner	17 mm (A/F)

7.3. Recommended tightening torque:

Components	Torque
Valve seat (4.1mm ID)	35 Nm
M10 Bolt for outside covering	25-35 Nm

7.4. Procedure to fit Main Valve Assembly : (Refer to Figure 1 and 4)

1. Unscrew cover bolts (2) and lift off the base (1).
2. Unscrew the assembly set screws (7), and dismantle the pivot frame (9).
3. Remove the valve seat (5) along with the valve seat gasket (8).
4. Replace the main valve assembly (A, B, C, D, E, F, G and T) as shown in figure 4 with a new one.
5. Refit the pivot frame (9) and tighten the assembly set screws (7).
6. Refit the cover (4) by using the cover bolts (2).

8. Troubleshooting:

If the expected performance is unachievable after the installation of Forbes Marshall liquid drain trap, check the following points for appropriate corrective measures.

Failure Mode	Possible Cause	Remedy
Trap does not pass moisture	Wrong Installation	Check the installation. Check for the flow direction arrow on the cover casting and the name plate arrow on the base casting.
	Blocked strainer	Check the strainer for any blockage and clean it if found blocked.
	Differential pressure greater than the max. allowable differential pressure	If the actual differential pressure is higher than the design ΔP , the trap would have failed in closed position as the float buoyancy will not be adequate to open the valve seat.
	Deposition on the main valve assembly	Check for the valve and seat assembly for blockage.
	Float punctured	Check if the ball float is punctured, if so replace it
	Stop valve of balancing pipe is closed.	Stop valve should be fully opened of the balancing pipe.
Leaking air	Air continuously leaking from the outlet	Check the installation. The arrow on the name plate should point downwards
		Check valve and seat assembly for any deposition and clean it
		Clean and lap the seating area.
	Air leaking from the trap body.	Tighten the cover nuts and bolts to the recommended torque.
		Check the gasket for any possible damage and replace it if required.
Not Draining Enough moisture	Reduced moisture draining capacity of the trap	Check parameters and trap sizing. The trap will not drain enough moisture if the actual size is below the recommended size based on the load
	Flooding of moisture (water)	Check whether the inlet strainer is partially blocked.
		Check main valve seat orifice for blockage. If blocked, clean and lap.
Trap is air bound	When the trap is connected to any compressed air plant, and there is a high load, there is a possibility of air binding in the trap.	Fit the balance pipe as shown in fig4. This will help the liquid to discharge the trapped air back into the mainstream.

9. Available Spares: (Refer to Figure 5)

Spare part	Symbol	Spare code
Main Valve Assembly (DN 15/20)	A,B,C,D,E,F,G,T	SPARE-1520FMLDT31-MVKIT
Main Valve Assembly(DN 25)	A,B,C,D,E,F,G,T	SPARE-25FMLDT31-MVKIT
Set of Gaskets (Packet of 5)	B,T	SPARE-152025FMLDT31-GKIT
Float assly(DN 15/20)	C	SPARE-1520FMLDT31-FKIT
Float assly(DN 25)	C	SPARE-25FMLDT31-FKIT

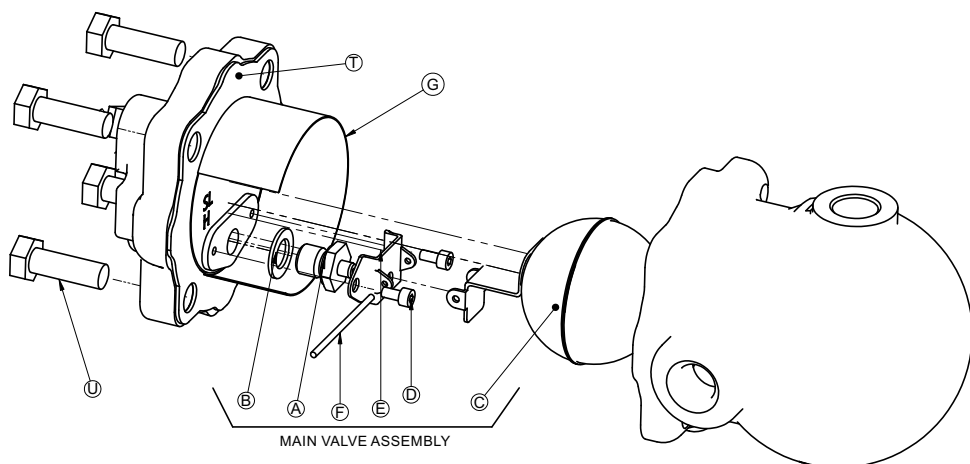


Figure 4: Exploded View of Forbes Marshall Liquid Drain Trap, FMLDT31

How to Order:

Example: 1 No. DN 15 Forbes Marshall Liquid Drain Trap, FMLDT31 Screwed BSPT

How to Order Spares:

Always order spares by using the description given in the column headed 'Available Spares'.

10. Warranty Period:

As per the ordering information and agreement in the contract.



www.forbesmarshall.com

Forbes Marshall Arca

Codel International

Krohne Marshall

Forbes Vyncke

Forbes Marshall Steam Systems

A: Forbes Marshall Pvt. Ltd.

Opp. 106th Milestone, CTS 2220,
Mumbai-Pune Road, Kasarwadi,
Pune MH 411034 INDIA

P: +91(0)20-68138555

F: +91(0)20-68138402

E: ccmidc@forbesmarshall.com

Forbes Marshall International Pte. Ltd.

16A, Tuas Avenue 1,
#05-21, JTC Space @Tuas
Singapore - 639533

P: +65 6219 3890

CIN No: U28996PN1985PTC037806